

# Enabling and Disabling DHCP

[https://documentation.extremenetworks.com/exos\\_32.2/GUID-771750A3-0D4A-4358-A3D0-72B3CD7518AE.shtml](https://documentation.extremenetworks.com/exos_32.2/GUID-771750A3-0D4A-4358-A3D0-72B3CD7518AE.shtml)

*DHCP* is enabled on a per port, per *VLAN* basis.

Enable or disable DHCP on a port in a VLAN using the commands:

```
enable dhcp ports port_list vlan vlan_name
```

```
disable dhcp ports port_list vlan vlan_name
```

---

Revision #1

Created 24 October 2024 16:22:15 by ColtM

Updated 24 October 2024 16:22:35 by ColtM